





# **All Sports Manufacturing Inc. RXV 4" Drop Carrier Lift Kit**

**Visit [AllSportsLiftKits.com](http://AllSportsLiftKits.com) for more  
All Sports products!**

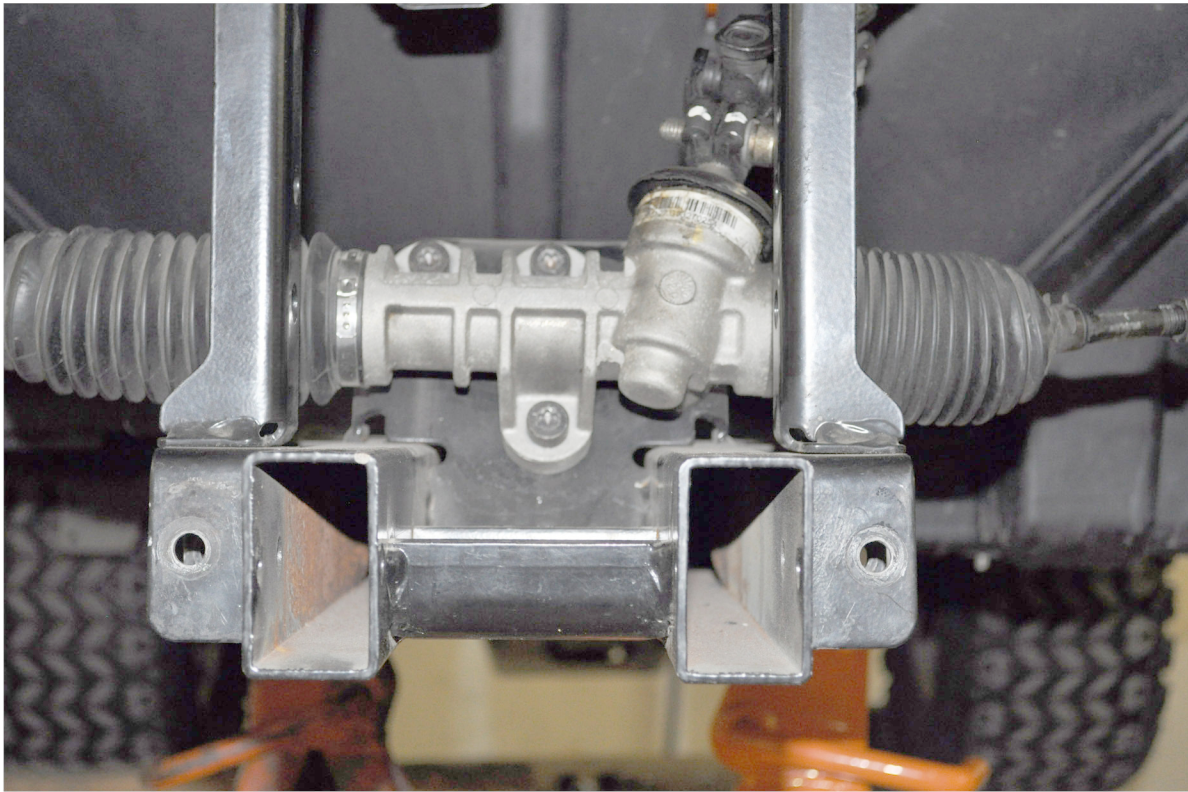


**1. Remove front cover. Then remove OEM control arms and spindles from cart. Save hardware for use in later steps.**

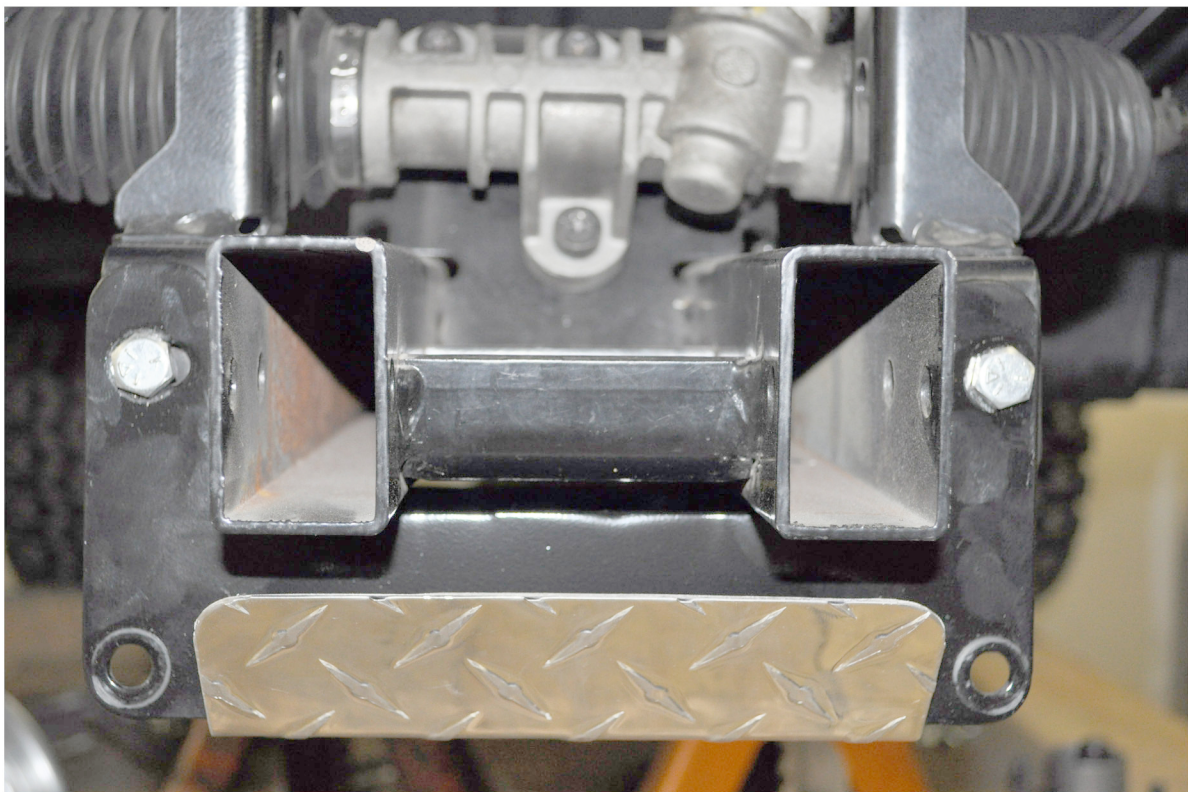


**2. Attach carrier to frame using four 3/8" x 1" bolts and four 3/8" nylocs. Tighten hardware.**



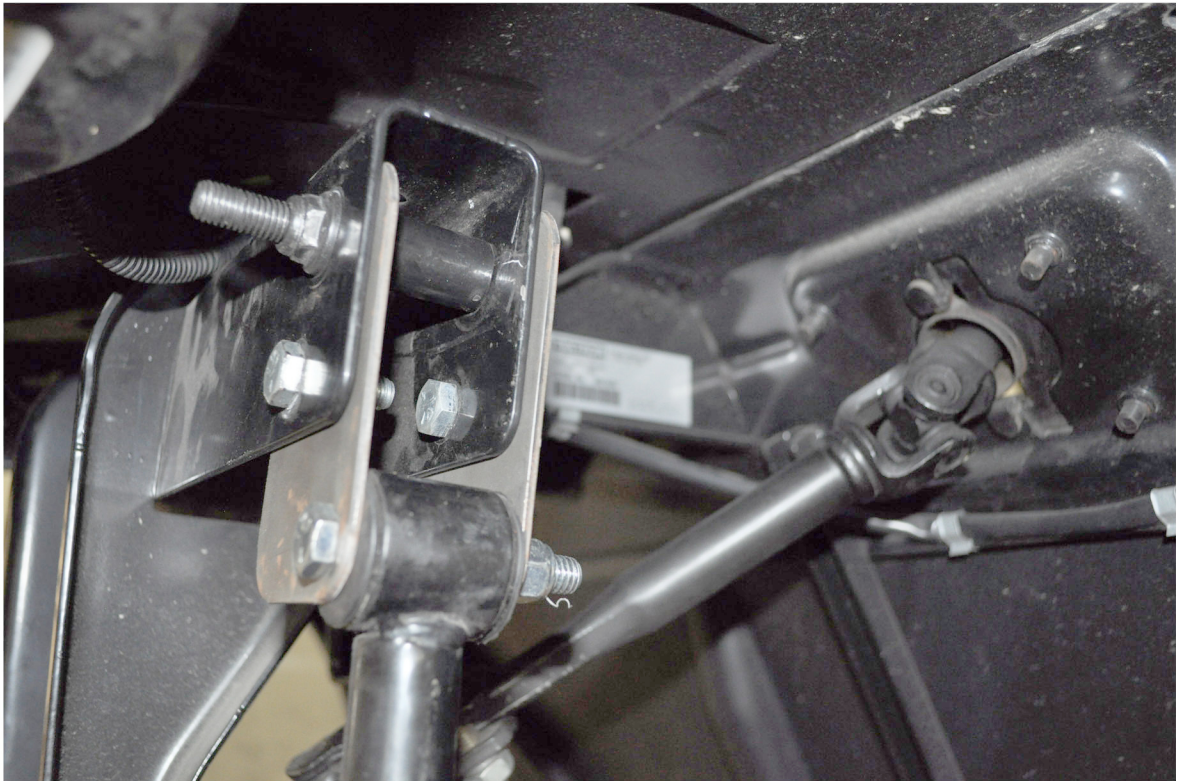


**3. Unbolt shock from stock location and re-attach with shock extension plates. Attach plate at top with OEM bolt and nyloc with spacer in-between. Attach mid-section with two 3/8" x 1" bolts and nylocs. Attach shock to plate with 3/8" x 2 1/2" bolt with nyloc. Tighten hardware. Repeat for opposite side.**

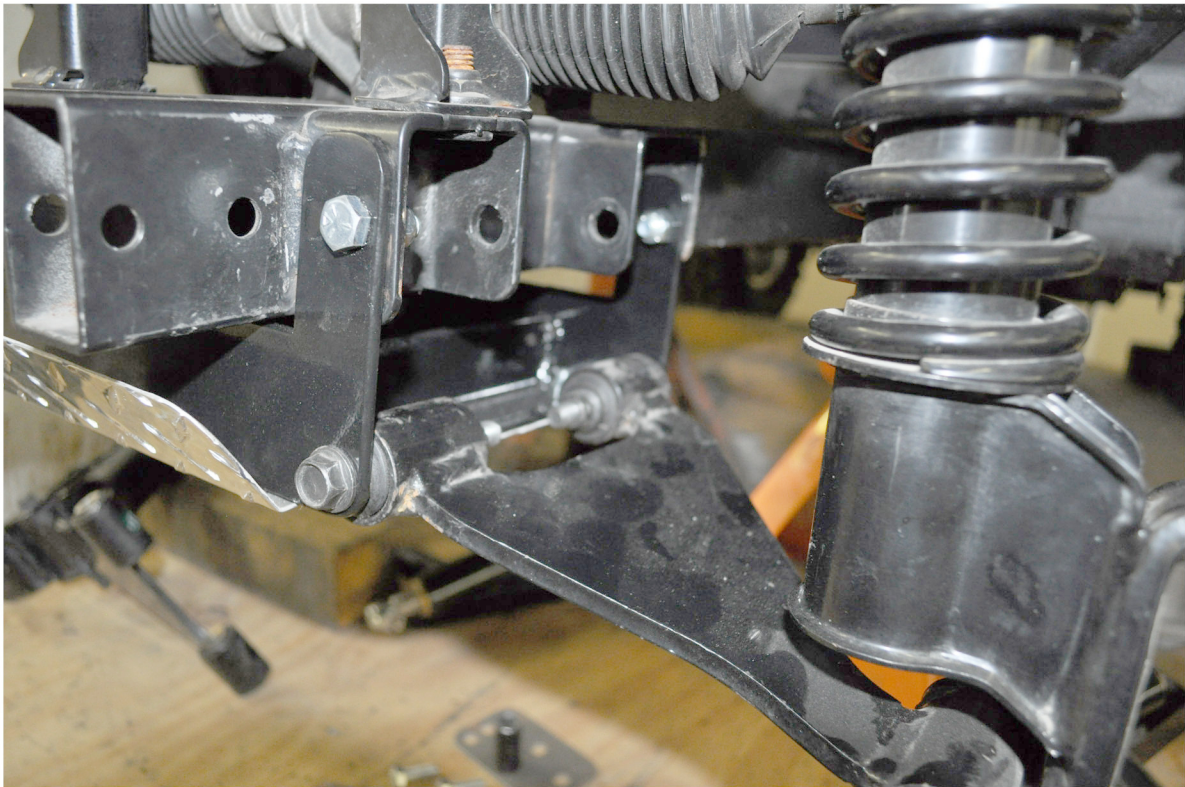

**4. Bolt control arms to bottom of the carrier using OEM bolts and nylocs. Tighten hardware.**



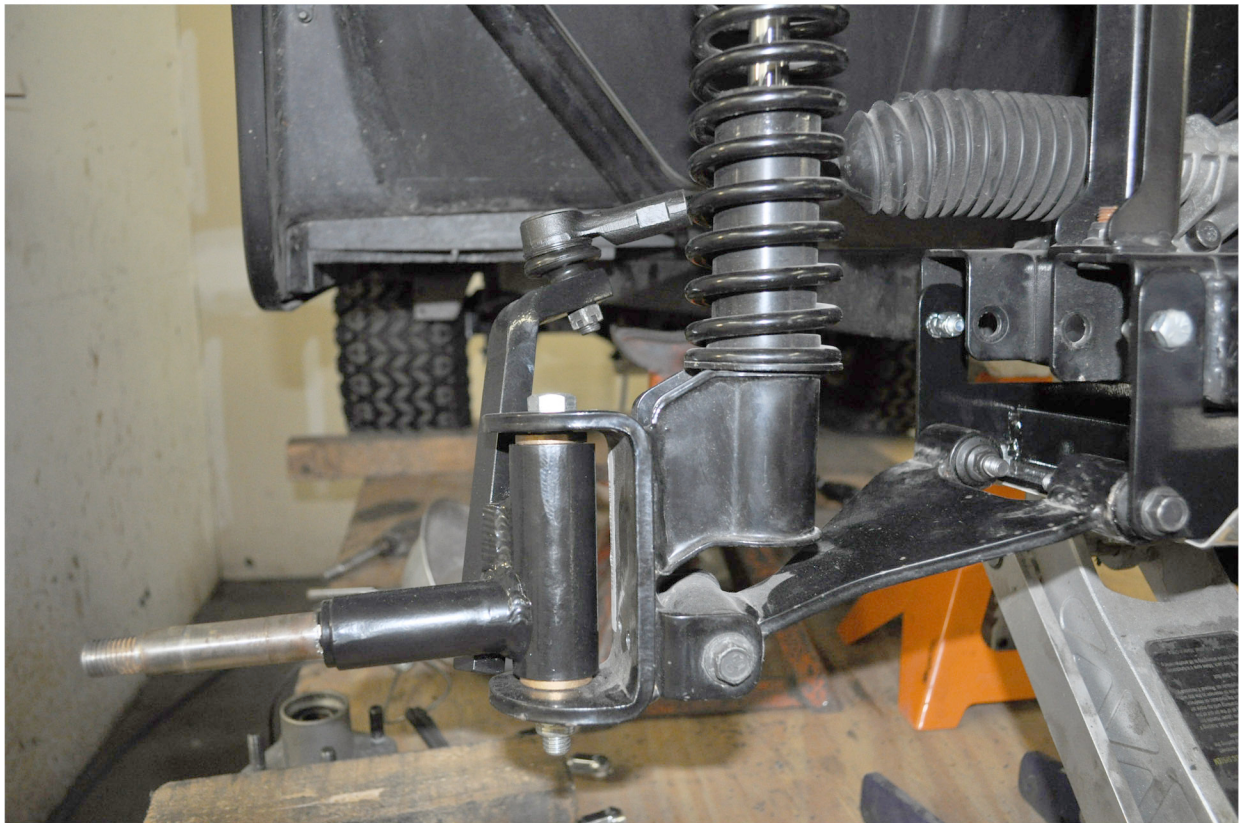

- 5. Attach new spindles to control arms using included 1/2" x 6" bolts, nylocs and SAE washers. Then attach tie rods to steering arms on spindles using OEM hardware. Tighten hardware and repeat for opposite side.**
- 6. Re-install OEM hubs on new spindles.**



# Rear End Assembly

1. Re-route passenger side brake cable by disconnecting cable from passenger rear drum brake. Re-route away from gas tank for clearance. Reconnect brake cable to drum.
2. Re-route drivers brake cable by disconnecting cable from drivers rear drum brake. Remove air filter assembly. Drill a hole as show in photo to guide brake cable through for clearance. Reconnect brake cable to drum. **\*Alternate brake cable available that does not require drilling. Part #ASM-RK12**

